

Thermostat Instruction Sheet

ETD-5M Two-Stage Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

ETD-5M Specifications

Range: 35° to 75°F (2° to 24°C)

Default Differential: 2.0°F (1.0°C) Fixed

Operation: Two Stage, low voltage


Thermostatic Power: 22 AMP at 24/125/277 VAC

Contact Action: Opens on rise

Dimensions: 4.75" X 2.75" x 2.75"

Additional Features: Snap action switch, single or double pole with positive off, UL listed and CSA Certified.

Figure 1 • ETD-5M Thermostat

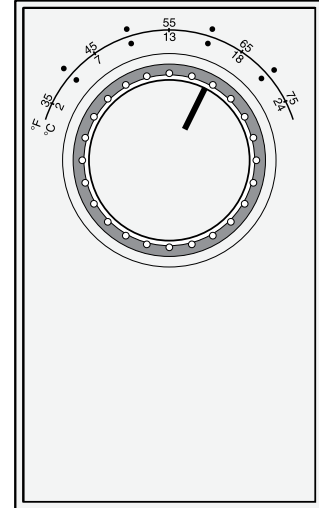

Installation Instructions

1. Remove cover of thermostat from base.
2. Disconnect the power source.
3. Locate in an area with good air circulation (no outside walls).
4. Install the thermostat approximately 5 feet above floor level.
5. Replace the cover onto base.

WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 2 • ETD-5M Thermostat Wiring

