

# Thermostat Instruction Sheet

## RK-134 Millivolt Thermostat

### Parts List

Columbus Electric Millivolt Thermostat (P/N: RK-134)

### RK-134 Specifications

**Range:** 35°-75°F / 10°-32°C

**Operation:** Single stage, low voltage, millivolt

**Electrical Rating:** Millivolt - 1 Amp Max.

**Contact Action:** Opens on rise.


**Dimensions:** 3" x 3" x 1.13".

**Additional Features:** Quick response, positive off.

### Installation Instructions

1. Remove cover of thermostat from base (Figure 1).
2. Disconnect the power source.
3. Locate in an area with good air circulation (no outside walls).
4. Install the thermostat approximately 5 feet above floor level.
5. Feed wires through the rectangular slots (Figure 2).
6. Connect wires to terminal screws (Figure 2).
7. Confirm that wiring does not interfere with thermostat operation.
8. Replace the cover.

Figure 1 • RK-134 Thermostat

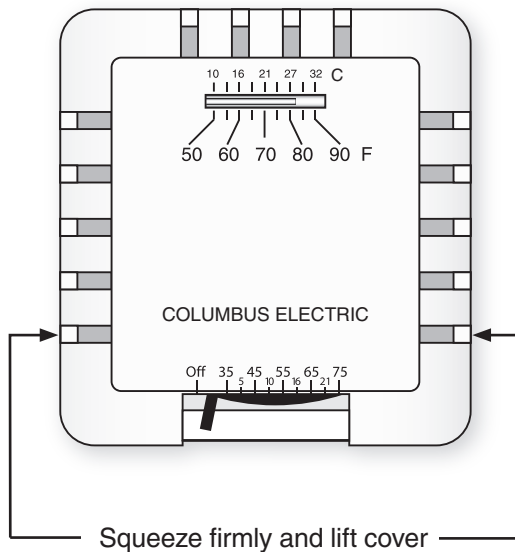

WARNING	
	If this product is used to replace a device containing mercury, the purchaser or consumer must ensure that the mercury is properly managed to comply with state or federal regulations. The mercury must not become part of solid waste or waste water. Additional guidance may be obtained from the manufacturer of the product being removed or by calling the Director of Environmental Services.

WARNING	
	To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 2 • RK-134 Thermostat Wiring

