

# Thermostat Instruction Sheet

## Honeywell TH-7300 Advanced Control Package

### Parts List

Honeywell Programmable Two-Stage Thermostat  
Honeywell Programmable Thermostat Sub-Base

### TH-7300 Specifications

**Range:** 40°-90°F / 4.5°-32°C heat/cool

**Operation:** Two stage, 24 VAC

**Electrical Rating:** 20-30 VAC; 0.05-1.5A running.

**Contact Action:** Opens on rise.

**Dimensions:** 4.625" x 7.25" x 1.75"

**Additional Features:** 7-day programming, use as a stand-alone unit or as part of an overall building management system, direct or remote sense, mercury free.

### Installation Instructions

1. Disconnect the power source.
2. Locate in an area with good air circulation (no outside walls).
3. Install the thermostat subbase approximately 5 feet above floor level.
4. Loosen the terminal screws on the subbase and connect the system wires (Figure 2).
5. Securely tighten each terminal screw.
6. Push excess wire back into the hole.
7. Plug the hole with nonflammable insulation to prevent drafts from affecting the thermostat.
8. Mount thermostat on subbase.

Figure 1 • TH-7300 Thermostat



### WARNING



If this product is used to replace a device containing mercury, the purchaser or consumer must ensure that the mercury is properly managed to comply with state or federal regulations. The mercury must not become part of solid waste or waste water. Additional guidance may be obtained from the manufacturer of the product being removed or by calling the Director of Environmental Services.


### WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

**Figure 2 • Typical Wiring Diagrams**

**A. Single heater, single thermostat - without relay board.**

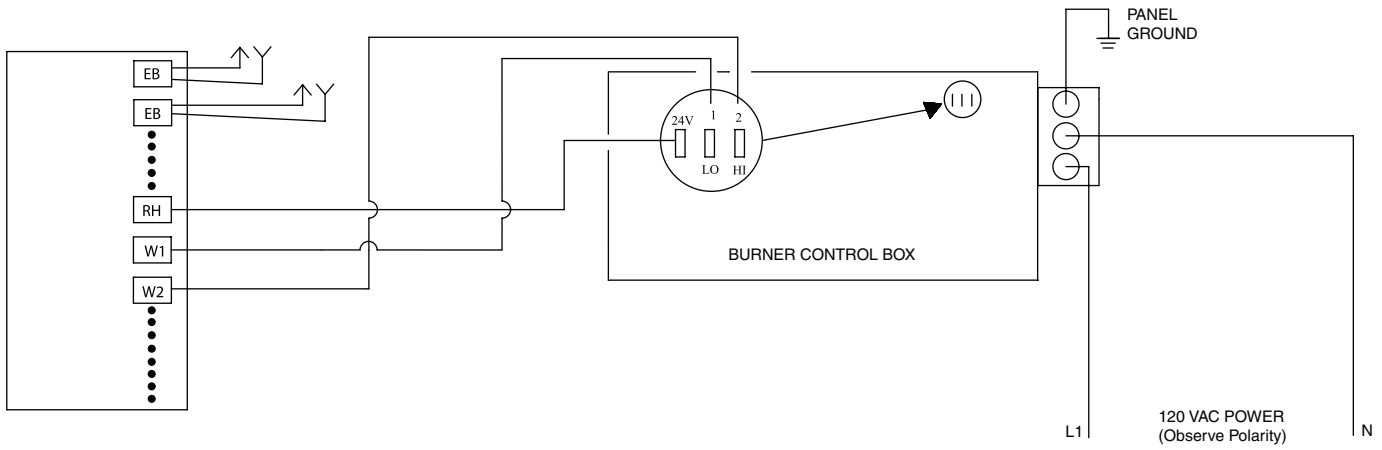

**B. Single heater, single thermostat - with relay board.**

