

# Thermostat Instruction Sheet

## TH-ET5 Single Stage Thermostat

See thermostat manufacturers instructions for specific information or requirements.

### TH-ET5 Specifications

**Range:** 35°-75°F (2°-24°C)

**Operation:** Single stage, high voltage, low voltage.

**Electrical Rating:** 22 amp non-inductive; 24/277 VAC.

**Contact Action:** Opens on rise.

**Differential:** Heat approximately 2°F


**Dimensions:** 4.75" x 2.75" x 2.75"

**Additional Features:** Rugged plastic construction, quick response, non-adjustable, bi-metal operative snap switch, UL Listed and CSA Certified.

### Installation Instructions

1. Remove cover of thermostat from base.
2. Disconnect the power source.
3. Locate in an area with good air circulation (no outside walls).
4. Install the thermostat approximately 5 feet above floor level.
5. Replace the cover onto base.

Figure 1 • TH-ET5 Thermostat

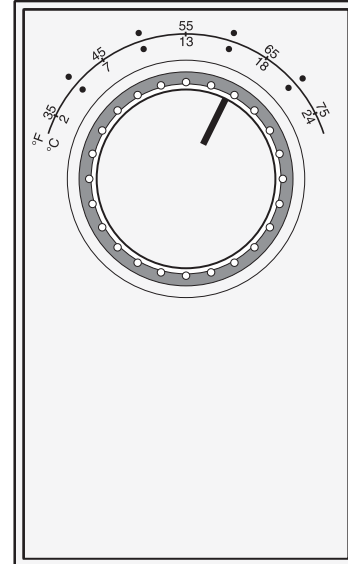

### WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 2 • TH-ETS Thermostat Wiring

