

Thermostat Instruction Sheet

TH-1F80 Single-Stage Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

Parts List

24V or millivolt advanced programmable heat/cool digital thermostat with backlit LCD display (P/N: TH-1F80).

TH-1F80 Specifications

Range: 45° to 90°F (7° to 32°C) heat/cool

Max Ambient Temp: 105°F (40°C)

Differential: 0.6°F - 1.5°F Adjustable

Operation: Low Voltage/Single-Stage/Millivolt, 5+1+1 (4 Period)

Electrical Rating: 24V - 1.5 Amp (5 heaters w/24VAO & 40VA transformer); 2 "AA" batteries required.

Contact Action: Opens on rise


Dimensions: 6.10" x 3.80" x 1.20"

Additional Features: 12/24 clock and temperature hold.

Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Replace the cover.

Figure 1 • TH-1F80 Thermostat

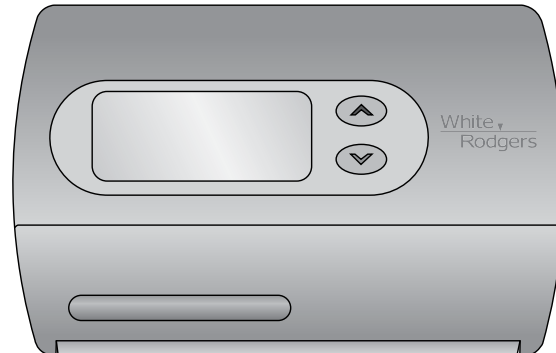

WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 2 • TH-1F80 Thermostat Wiring

