

Thermostat Instruction Sheet

RK-130 (AKA RK-134) Millivolt Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

Parts List

Columbus Electric Millivolt Thermostat (P/N: RK-130)

RK-130 Specifications

Range: 35° to 75°F (2° to 24°C)

Operation: Single stage, low voltage, millivolt

Electrical Rating: Millivolt - 1 Amp maximum

Contact Action: Opens on rise


Dimensions: 3" x 3" x 1.13"

Additional Features: Quick response and positive off

Installation Instructions

- 1 Remove cover of thermostat from base (Figure 1).
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Feed wires through the rectangular slots (Figure 2).
- 6 Connect wires to terminal screws (Figure 2).
- 7 Confirm that wiring does not interfere with thermostat operation.
- 8 Replace the cover.

Figure 1 • RK-130 Thermostat

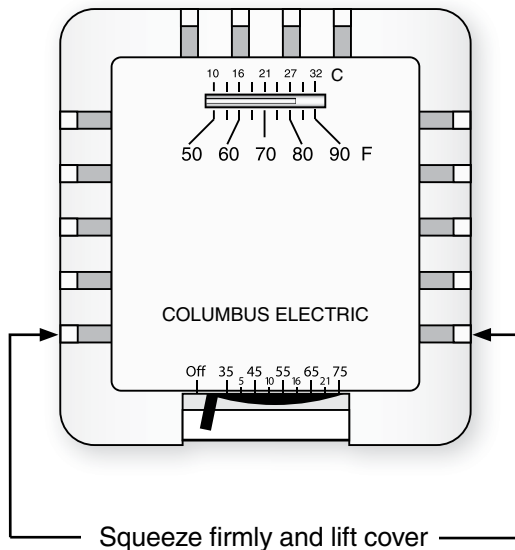

WARNING



If this product is used to replace a device containing mercury, the purchaser or consumer must ensure that the mercury is properly managed to comply with state or federal regulations. The mercury must not become part of solid waste or waste water. Additional guidance may be obtained from the manufacturer of the product being removed or by calling the Director of Environmental Services.

WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 2 • RK-130 Thermostat Wiring

