

# Thermostat Instruction Sheet

## TH-BR52 Programmable Thermostat

See manufacturer's instructions for specific information or requirements.

### TH-BR52 Specifications

**Operation:** Two-stage, single stage control.

**Purpose:** Flexible programming for residential and commercial applications.

**Programming:** 7 Day, 5-2 Day or Non-Programmable.

**Control Range:** 45° to 90° F (7° to 32° C).

**Electrical Rating:** 24 Volt AC (18-30 Volt AC).

1 amp maximum load per terminal.

5 amp total maximum load (all terminals).

**Dimensions:** 3.86" x 5.11" x 1.42".

**Additional Features:** Bright Blue Backlight, Meets California Title 24 Guidelines, Multi-Level Keypad Lockout, Hardwire or Battery Powered, Indoor or Outdoor Remote Sensing Capable.


**Related Accessories:** RS-BR53 Remote Indoor Sensor, RS-BR54 Remote Outdoor Sensor

### Installation Instructions

Must be mounted to an electrical junction box suitable for the application.

### Figure 2 • TH-BR52 Thermostat Wiring

**INSTALLER:** Be sure to set the thermostat up for two-stage configuration.

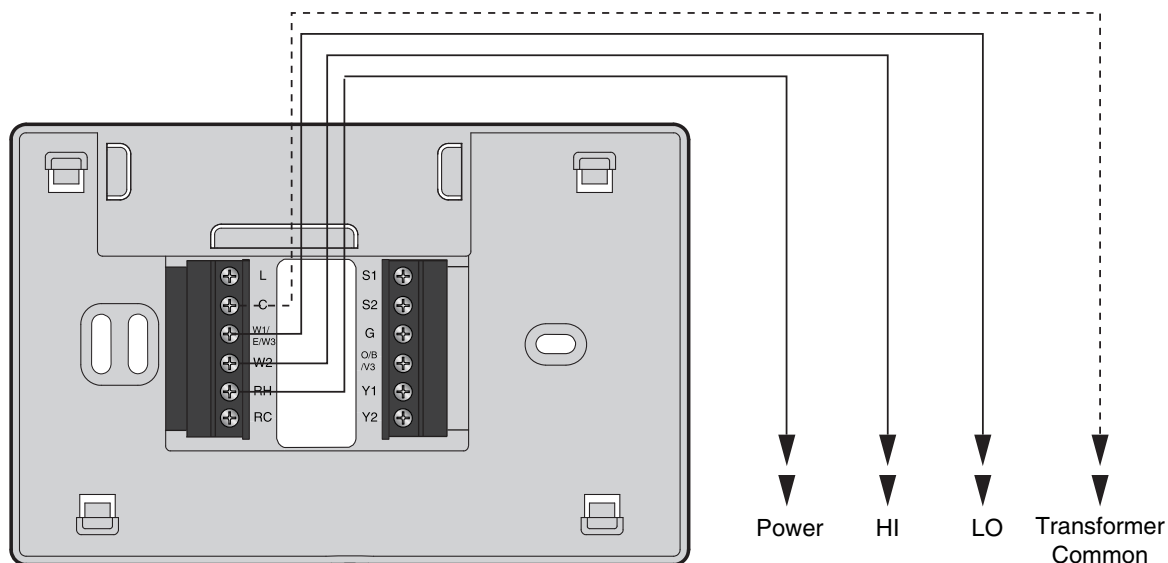

### WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 1 • TH-BR52 Thermostat

