

DETROIT RADIANT PRODUCTS CO.


Wiring Diagram for Suffix NFS-2/PFS-2 120V

(Electronic Detection Direct Spark Ignition System)

Flame Sensing Element


Solid state logic circuit in control board continuously monitors spark current and flame conductance to ground through spark electrode.

TYPICAL WIRING SCHEMATIC

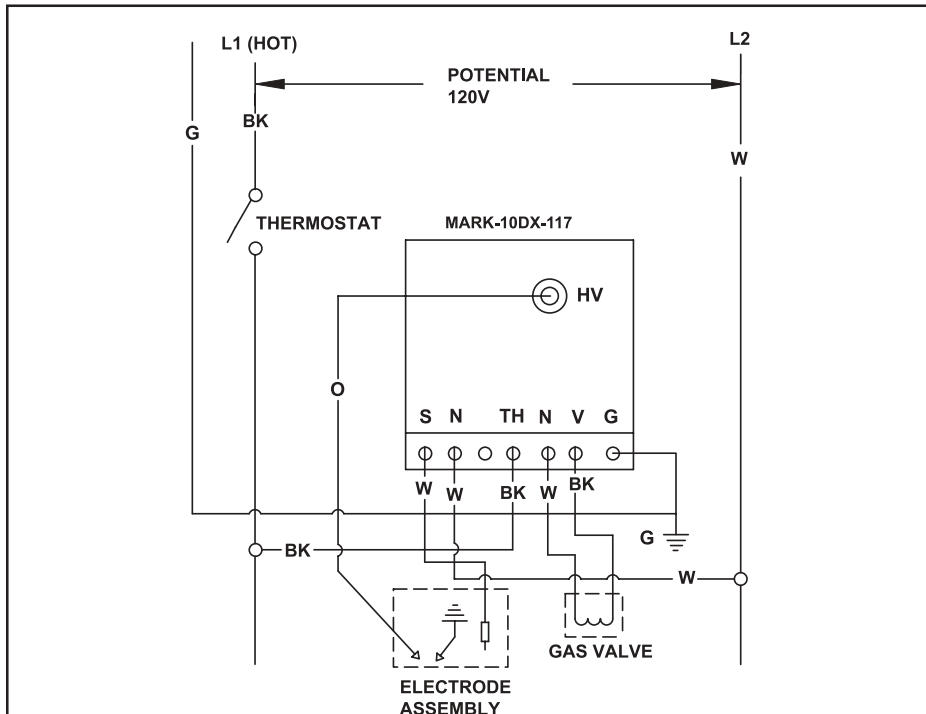

1. This wiring diagram must be affixed on or adjacent to the heater at all times.
2. If any of the original wire as supplied with the appliance must be replaced, use 16AWG-TEW 105°C, 600v wire or its equivalent.
3. Applies to natural gas and propane gas.

TYPICAL BLOCK DIAGRAM

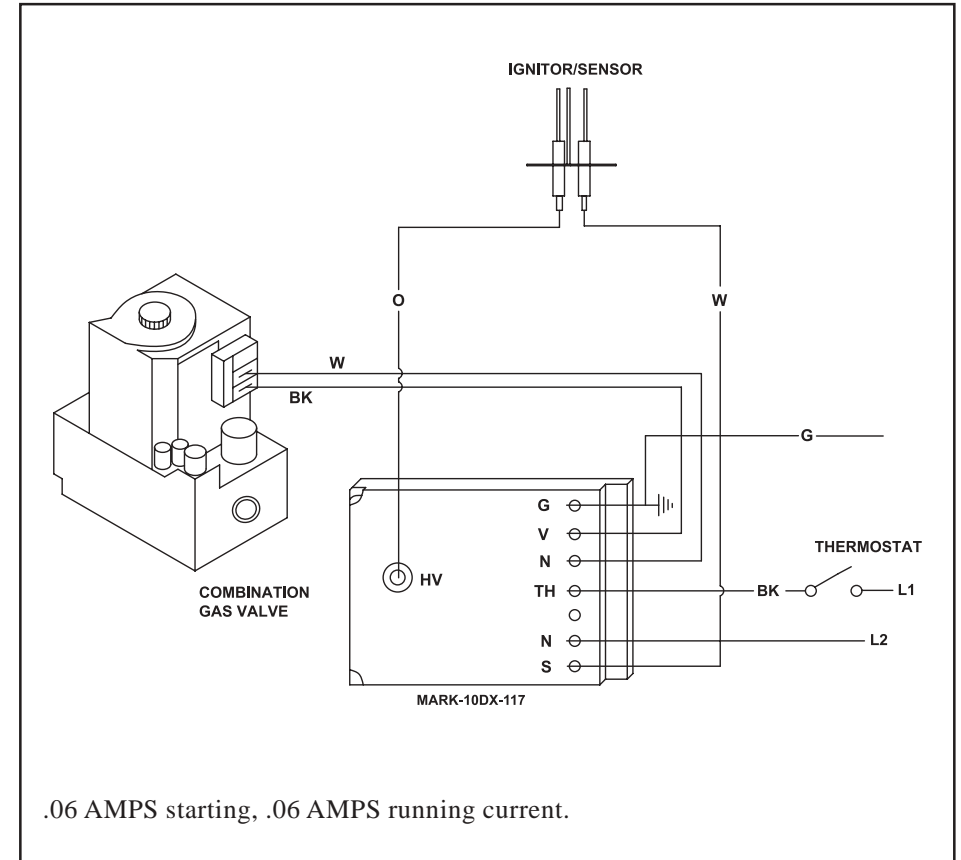

.06 AMPS starting, .06 AMPS running current.



DETROIT RADIANT PRODUCTS CO.

Wiring Diagram for Suffix NFS-2/PFS-2 120V

(Electronic Detection Direct Spark Ignition System)

Normal Sequence of Operation

1. Thermostat contacts close.
2. Seven second pre-purge.
3. Power is applied to main burner electrode and gas valve.
4. Upon ignition of the heaters main burner(s), sparking will cease and sensor will continue monitoring until thermostat is satisfied.
5. If flame has not been established by the 15 second trial for ignition period, the heater will try an additional 2 times before going into safety lockout. The heater must be reset by an interruption in the power source.
6. Should flame outage occur during duty cycle, the system will reactivate the electrode to provide for reignition. The flame will be re-established or operation #5 will occur.



Printed in U.S.A.
© 2006 **Detroit Radiant Products Co.**
21400 Hoover Rd., Warren, MI 48089
T. (586) 756-0950 F. (586) 756-2626
www.detroitradiant.com
Form# DRWD-NFS/PFS-2-1M-11/06 (DRP)

Production Period
03/97-Present