

Thermostat Instruction Sheet

LuxPro TH-P721 Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

Parts List

LuxPro programmable 7 day, 5/2 day, or non-programmable thermostat (P/N: TH-P721)

TH-P721 Specifications

Range: 45°F to 90°F (7°C to 32°C)

Differential: Adjustable temperature differential (.25-2.25)

Operation: Single or dual stage operation

Electrical Rating: 1.5 Amps per terminal at 24 V AC (15 heaters w/HLRP and 4000-01 V), Millivolt, 24 V, or two AA alkaline batteries


Dimensions: 5.375"(136mm) x 3.375"(86mm) x 1.25"(32mm).

Additional Features: 2 or 4 selectable periods per day. °C/°F display, keypad lock to prevent unauthorized use

Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Replace the cover.

Figure 2 • TH-P721 Thermostat Wiring

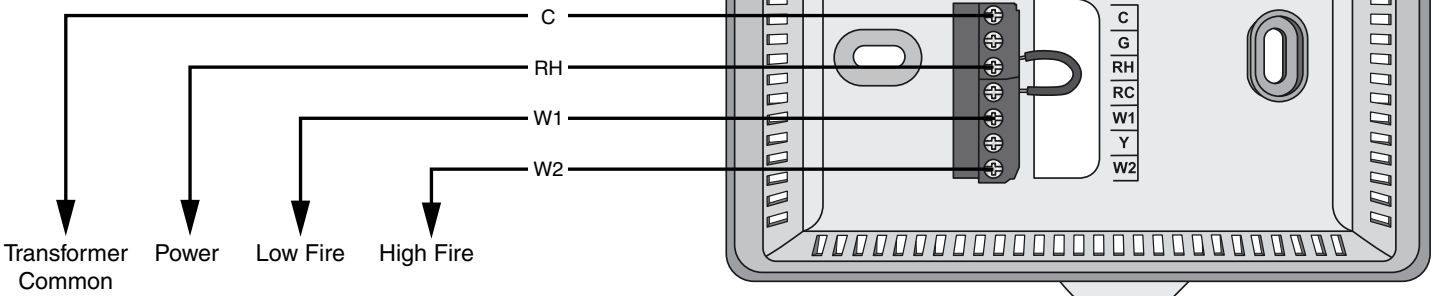

WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 1 • TH-P721 Thermostat

