

Low Intensity Parts Instruction Sheet

RVA2 Emergency Kit (P/N: RVA2-EK)

NOTE: Gas valve not included. Make sure to specify gas type when ordering gas valve.

Parts List:

- Micro 60U-24 Circuit board (P/N: TP-851)
- 24V Relay Board (P/N: TP-825)
- Glo-Bar Ignitor (P/N: TP-50)
- Pressure Switch (See Chart 1 Below)
- Sight Glass (P/N: TP-15)

Related Parts List:

- Natural Gas Valve (P/N: TP-840A)*
- LP Gas Valve (P/N: TP-841A)*
- Flame Rod (P/N: TP-222)
- Indicator Lights (P/N: TP-828)
- Transformer (P/N: TP-826)

WARNING




Improper installation, adjustment, alteration, service or maintenance can cause property damage, serious injury or death. Read and understand, the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment. Only trained, qualified gas installation and service personnel may install or service this equipment.

Chart 1 • Pressure Switches

| MBH Range | 65-75 | 100-125 | 150 |
|----------------|-------------|-------------|-------------|
| Part Number | TP-264B | TP-264E | TP-264D |
| X-Ref., IS220- | -10051F5166 | -16051F5169 | -20051F5170 |
| Normal Setting | Open | Open | Open |

Figure 1 • Internal Wiring Diagram

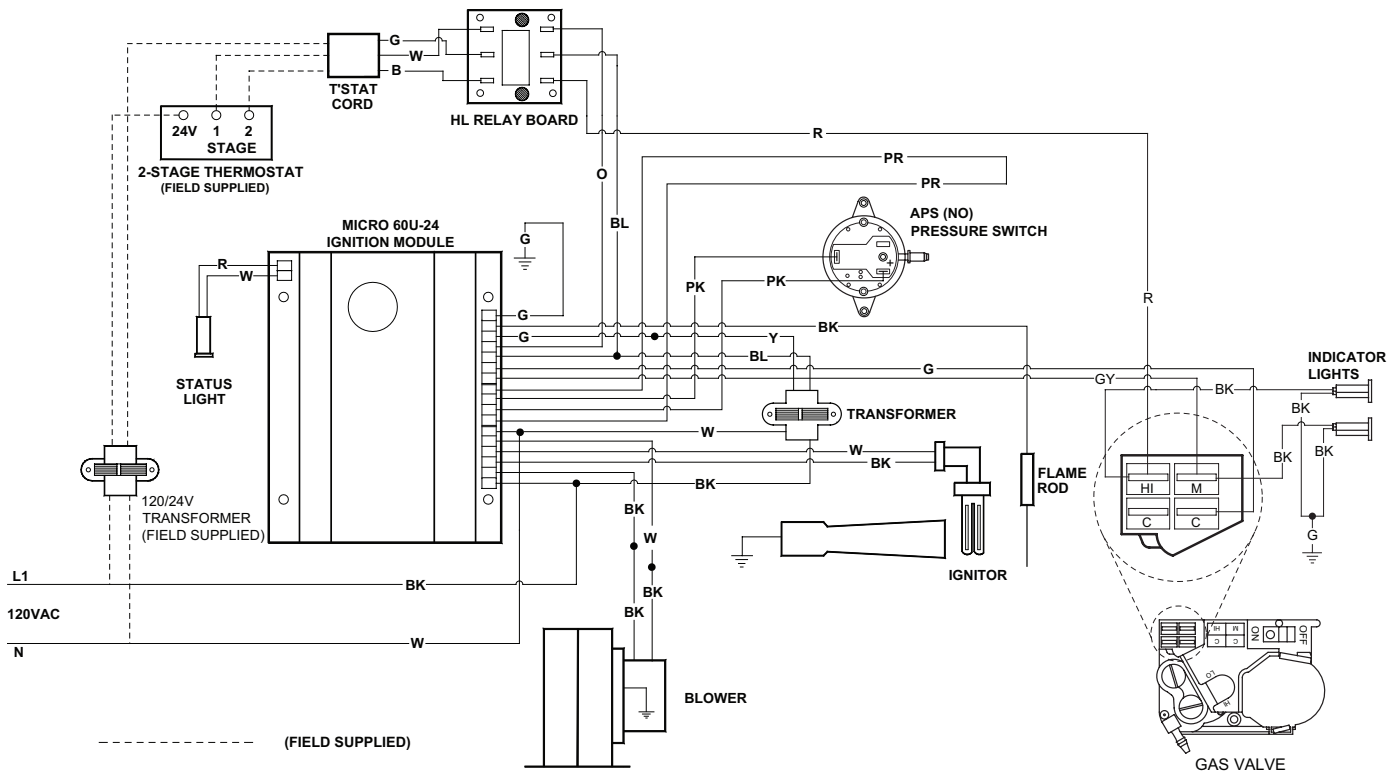

NOTE: Replacement parts information, including photos and technical data is available online at www.detroitradiant.com/parts