

Low Intensity Accessory Instruction Sheet

Condensate Kit Installation (P/N: V-CT-V, V-CT-H and V-CN)

Note: For use with HLV series heaters that are horizontally vented. For vertical venting, refer to page 2.

Kit Contents

- (A) V-CT-V - Condensate trap and tee for vertical venting
- (B) V-CT-H - Condensate trap and tee for horizontal venting
- (C) V-CN - Condensate neutralization kit

Figure 1 • Kit Contents


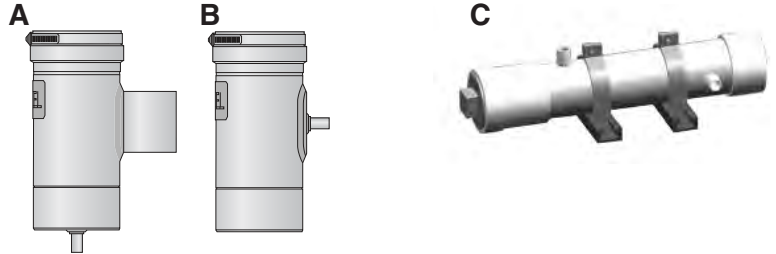


Figure 2 • Horizontal Venting with Condensate Trap and Neutralization Kit

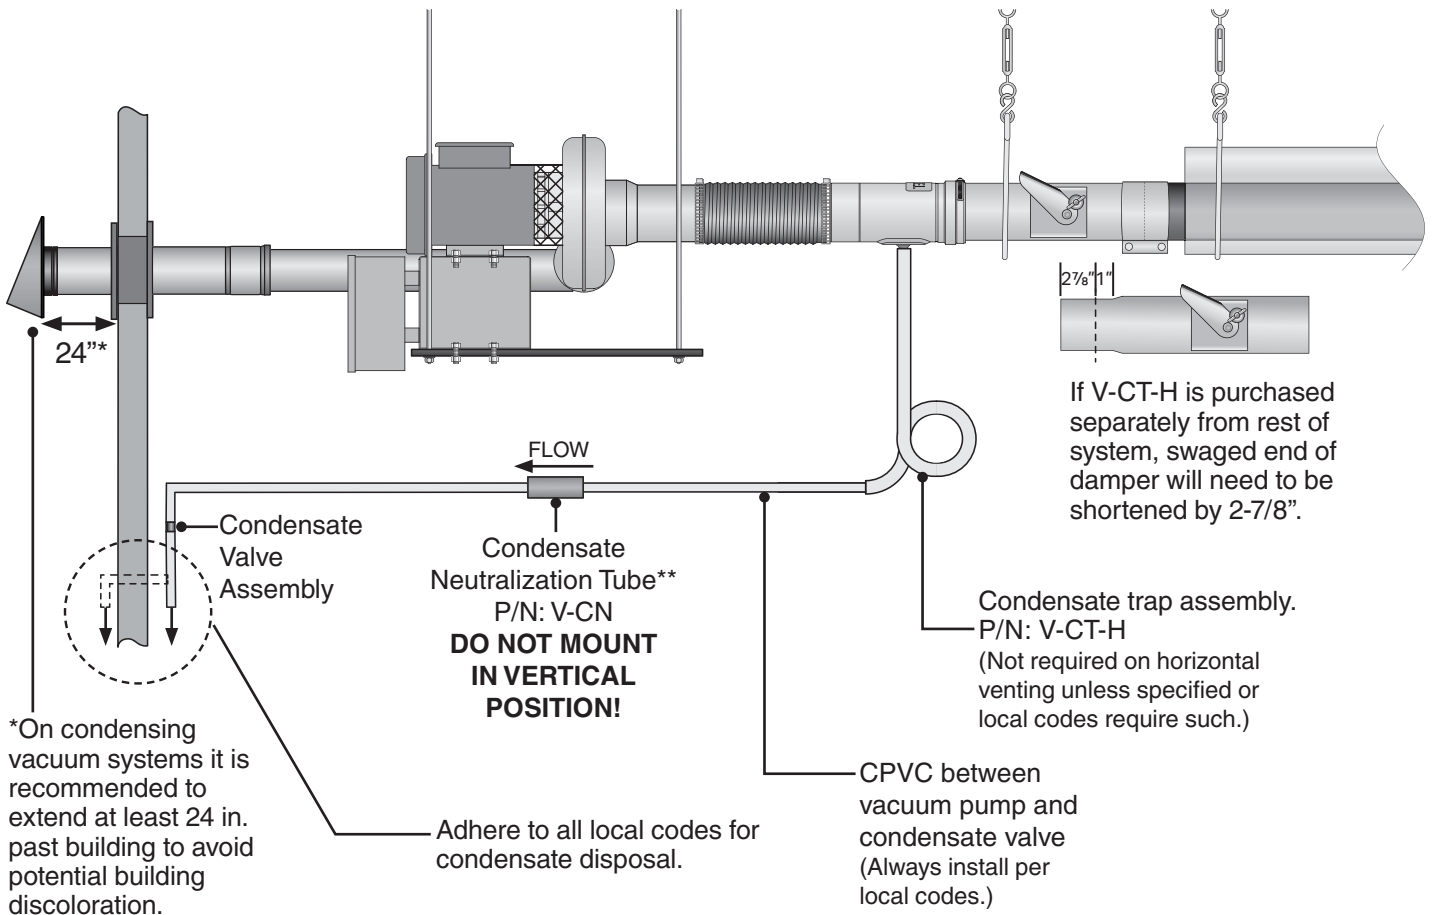


** For specific installation instructions, refer to the condensate neutralization kit manufacturer's installation guide.

Low Intensity Accessory Instruction Sheet

Condensate Kit Installation (P/N: V-CT and V-CN)

Note: For use with HLV series heaters that are vertically vented. For horizontal venting, refer to page 1.

Figure 3 • Vertical Venting with Condensate Trap and Neutralization Kit

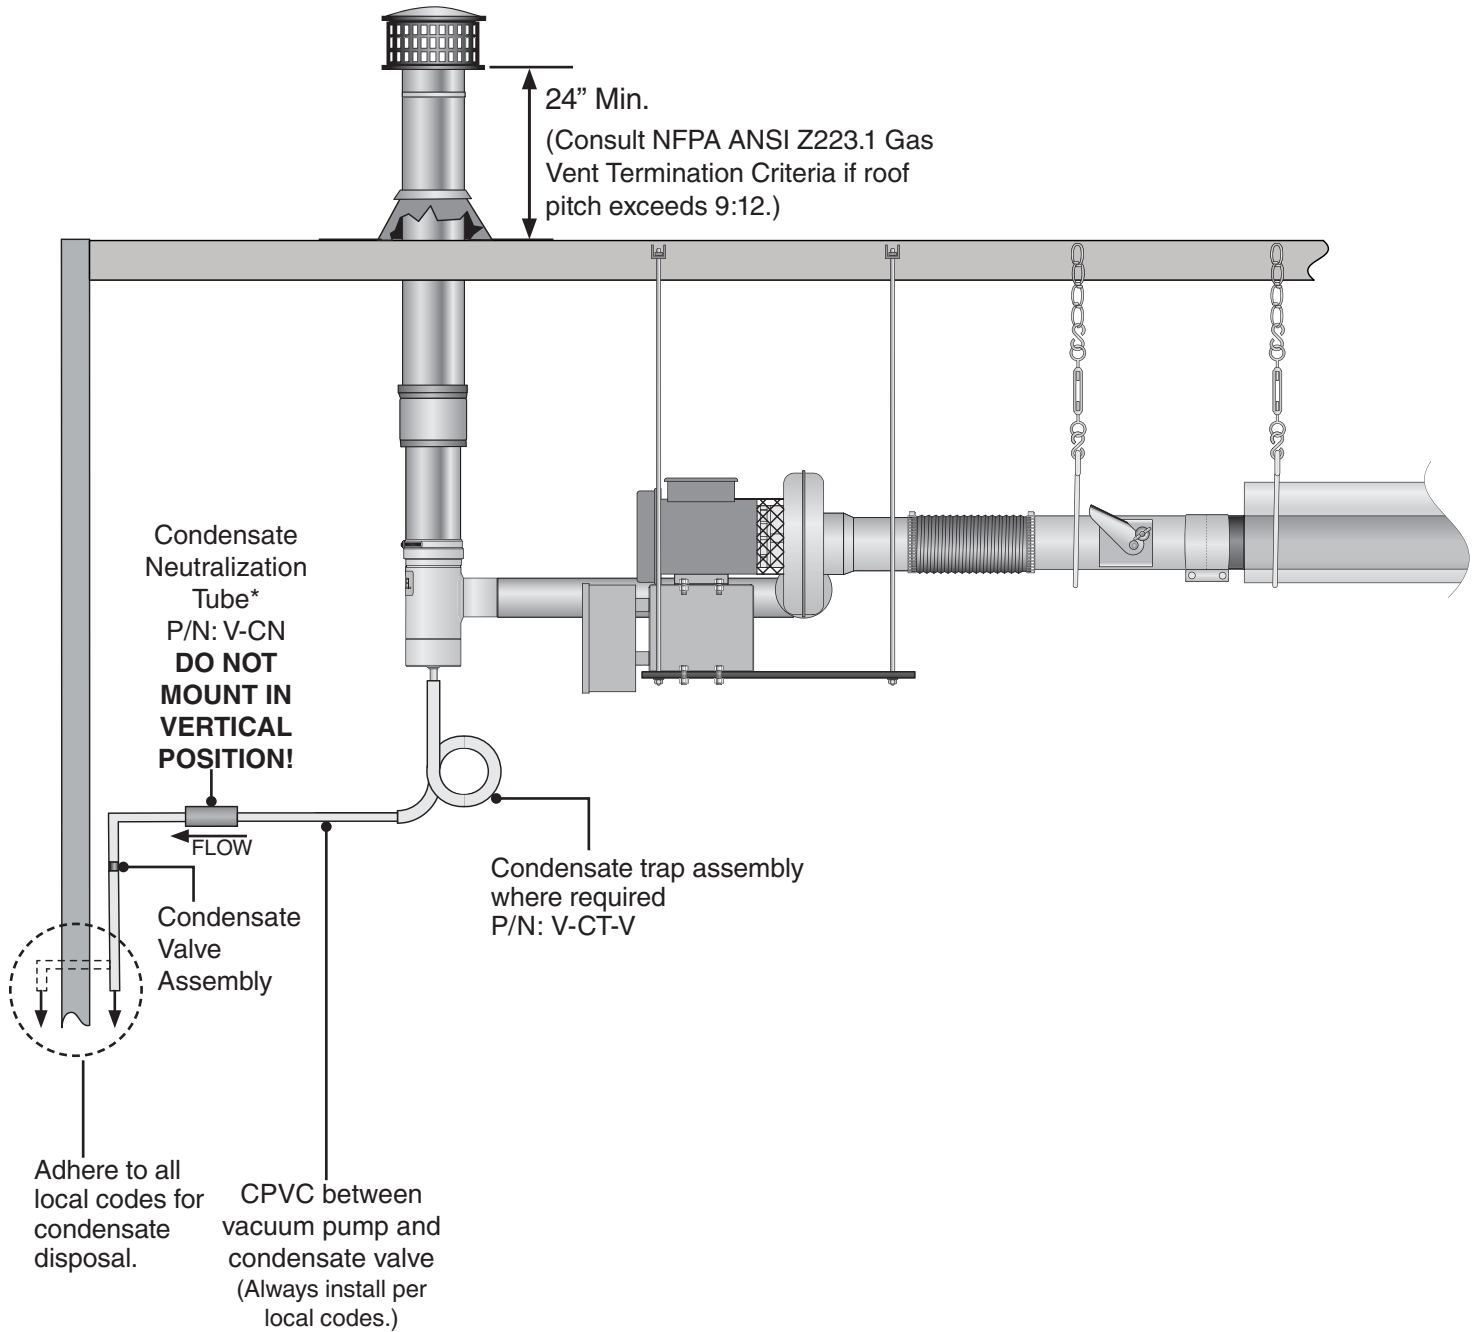

* For specific installation instructions, refer to the condensate neutralization kit manufacturer's installation guide.