
All listed clearances to combustibles are in inches.

|   | MODEL NUMBER                            | ⊢— SIDES —⊢ |        |     |       |     |
|---|---|-------------|--------|-----|-------|-----|
| CONFIGURATION                                 | (LENGTH) - MBH                          | FRONT       | BEHIND | TOP | BELOW | END |
| A, B, C<br>0°-Dual Pass                       | REV (20, 30, 40)-65, 75, 100 [N, P]     | 28          | 28     | 2   | 72    | 12  |
|   | REV (40, 50)-125, 150 & (60)-150 [N, P] | 37          | 37     |     | 81    |     |
|   | REV (50, 60)-175, 200 [N, P]            | 47          | 47     |     | 97    |     |
|   | 20-Ft. From Burner                      | 11          | 11     | 2   | 55    | 12  |
| <b>D</b><br>0°-Ultra-Wide<br>Single Pass      | REV (20, 30, 40)-65, 75, 100 [N, P]     | 18          | 18     | 2   | 72    | 12  |
|   | REV (40, 50)-125, 150 & (60)-150 [N, P] | 27          | 27     |     | 81    |     |
|   | REV (50, 60)-175, 200 [N, P]            | 34          | 34     |     | 97    |     |
|   | 20-Ft. From Burner                      | 10          | 10     | 2   | 55    | 12  |
| <b>E</b><br>35°–Forward Shield/<br>Open Throw | REV (20, 30, 40)-65, 75, 100 [N, P]     | 43          | 10     | 4   | 59    | 12  |
|   | REV (40, 50)-125, 150 & (60)-150 [N, P] | 57          | 10     |     | 76    |     |
|   | REV (50, 60)-175, 200 [N, P]            | 70          | 15     |     | 94    |     |
|   | 20-Ft. From Burner                      | 22          | 10     | 4   | 46    | 12  |

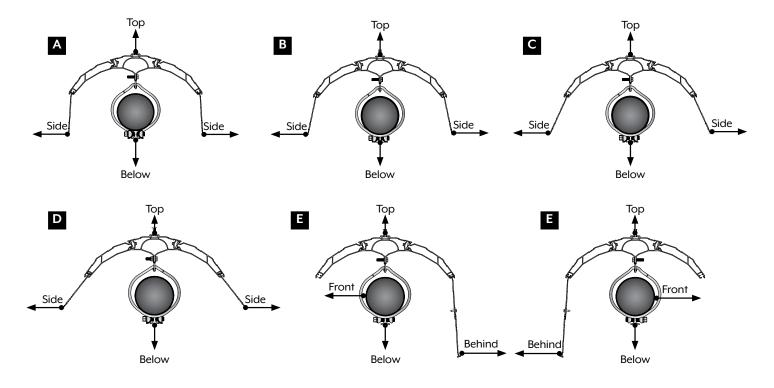



Read and understand the installation, operation, and maintenance manual prior to installing or servicing this unit.

In locations used for the storage of combustible materials, signs must be posted adjacent to the heater's thermostat specifying stacking heights.