

# Thermostat Instruction Sheet

## TH-BR12 Non-Programmable Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

### TH-BR12 Specifications

**Range:** 45°F to 90°F (7°C to 32°C)

**Differential:** Adjustable temperature differential (2°–6°)

**Operation:** Single or two stage operation

**Electrical Rating:** 24 VAC (18–30 VAC)

1 amp maximum load per terminal

3 amp total maximum load (all terminals)

**Dimensions:** 3.62"(92 mm) x 4.72"(120 mm) x 1.38"(35 mm)

**Additional Features:** Bright blue backlight, hardwire or battery powered, permanent memory retains settings, and front access reset button

### Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Replace the cover.
- 6 **NOTE:** Thermostat is pre-set for single stage. Refer to manufacturer's User Manual for instructions to select two stage.

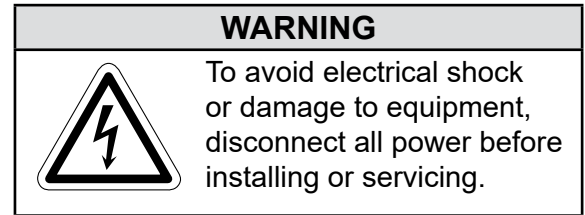


Figure 1 • TH-BR12 Thermostat

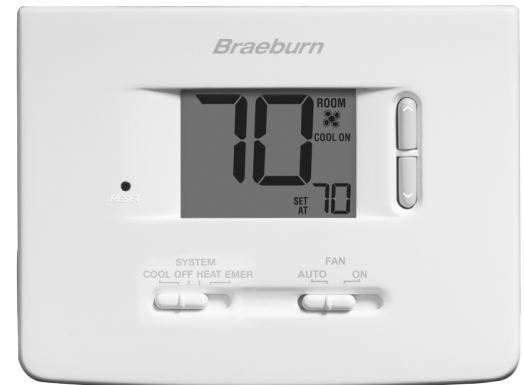


Figure 2 • TH-BR12 Thermostat Wiring

