

Thermostat Instruction Sheet

TH-B205WF Wi-Fi Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

TH-B205WF Specifications

Range: 45°F to 90°F (7°C to 32°C)

Differential: +/- 1°F

Operation: Single or two stage operation

Electrical Rating: 24 VAC (18–30 VAC)

1 amp maximum load per terminal

Dimensions: 4.5"(114 mm) x 5.75"(146 mm) x 2.25"(57 mm)

Additional Features: Bright blue backlight, hardwire or battery powered, 7-day/5-2 day/non-programmable, auto or manual changeover, user and installer lock modes, SmartLimit temperature limits, and Wi-Fi compatible

Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Replace the cover.
- 6 **NOTE:** Thermostat is pre-set for single stage. Refer to manufacturer's User Manual for instructions to select two stage.

Figure 2 • TH-B205WF Thermostat Wiring


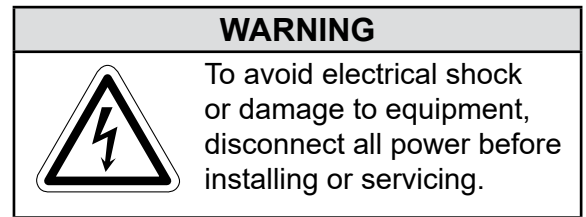


Figure 1 • TH-B205WF Thermostat

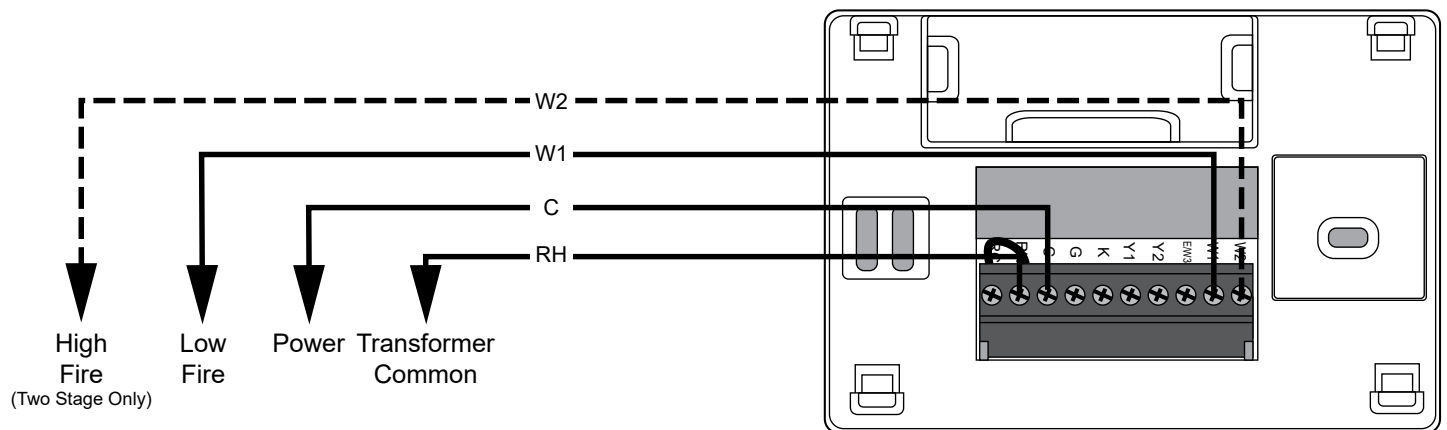