

SUBMITTAL SHEET

All listed clearances to combustibles are in inches.

UH-60-SS	FRONT	TOP AND BOTTOM	ACCESS SIDE	NON-ACCESS SIDE	REAR	VENT CONNECTION
Clearance to Combustibles	60 in.	1 in.	18 in.	1 in.	1 in.	6 in.
Clearance to Allow Service	60 in.	1 in.	18 in.	1 in.	18 in.	6 in.

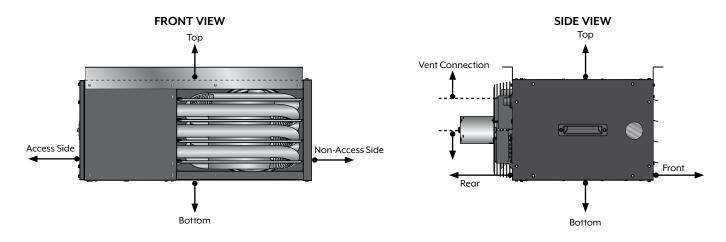

FA-100-SS AND FA-250-SS	FRONT	TOP AND BOTTOM	ACCESS SIDE	NON-ACCESS SIDE	REAR	VENT CONNECTION
Clearance to Combustibles	60 in.	1 in.	18 in.	1 in.	1 in.	6 in.
Clearance to Allow Service	60 in.	1 in.	18 in.	1 in.	18 in.	6 in.

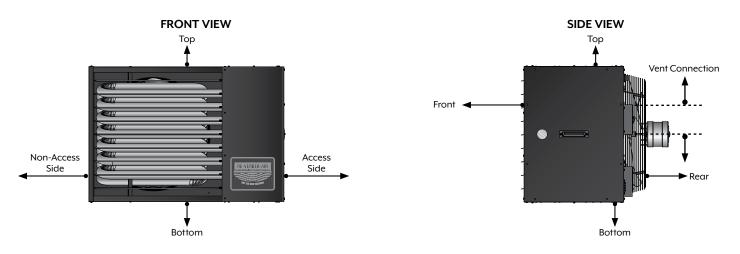



Read and understand the installation, operation, and maintenance manual prior to installing or servicing this unit.

In locations used for the storage of combustible materials, signs must be posted adjacent to the heater's thermostat specifying stacking heights.

